

QUICK GUIDE FOR THE CORRECT MAINTENANCE OF THE SCRUBBING MACHINE:

DAILY

BEFORE USE

BRUSH AND SQUEEGEE CHECK:

Check brush/pad and the squeegee rubbers cleanliness and wear, to have a correct fixing.



MACHINE PREPARATION:


Place the machine with the brush facing the floor, then bring the handle bar into working position. Fill the solution tank with water and detergent in the recommended percentage



BATTERIES' CONNECTION:


Turn the blocking levers to take off the filter. Remove the coupler of the squeegee hose and take off the recovery tank.

AGM: connect the two connectors.
XFC: connect the connector.

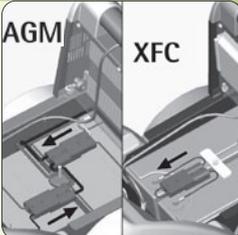



CHECK BATTERY CHARGE LEVEL:

AGM: when the orange signal turns on, it is necessary to charge the batteries (when the red signal turn on, the machine will stop).
XFC: when the green signal blinks, it is necessary to charge the batteries (when the red signal turn on, the machine will stop).

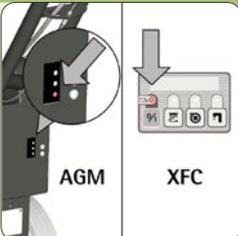

ALWAYS CHARGE THE BATTERIES:


NEVER LEAVE THE BATTERIES DISCHARGED! PROVIDE THEM IMMEDIATE RECHARGING. IF A LONGER STOP OF THE MACHINE IS EXPECTED, ALWAYS DISCONNECT THE BATTERIES.

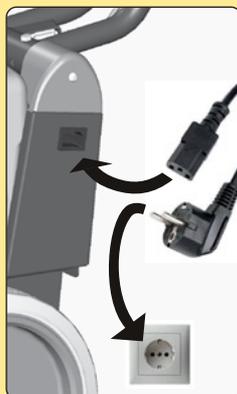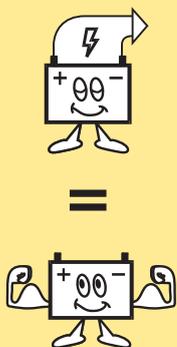

AFTER USE


EMPTYING AND CLEANING THE RECOVERY TANK:

Turn the blocking levers to take the filter off. Take the recovery tank off by removing the coupler of the squeegee hose, then empty it and rinse it.

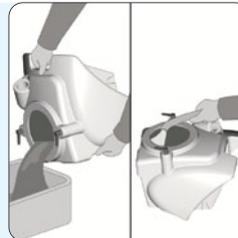

EMPTYING AND RECOVERING OF THE REMAINS DETERGENT SOLUTION:

Unscrew the lower plug to recover the excess of detergent solution in appropriate containers. Avoid leaving detergent solution in the tank for too long. Clean the upper tank filter and clean the machine with a damp cloth.

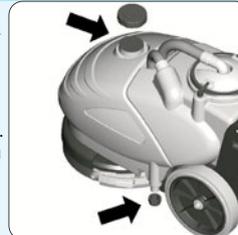


CLEANING SUCTION FILTER:

To release the filter from the screws present on the cover, take it off with the float bending the filter edge. Clean all parts with a water jet, reassemble everything. Never use the machine without the filter.



VERTICAL POSITION OF THE MACHINE

After having emptied and cleaned both tanks, fold the handle bar onto the machine. Rotate it on the rear wheels by lifting the front part (point A and B), bringing it to the vertical position.

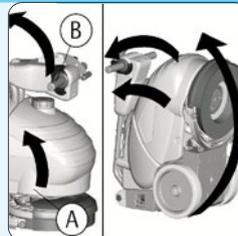


SQUEEGEE CLEANING:

Clean the rubbers and the suction inlet of the squeegee to remove eventual residuals of dirt.



REMOVE AND CLEAN THE BRUSH:

Rotate the brush clockwise until it is released. Clean with a water jet and reassemble it again.

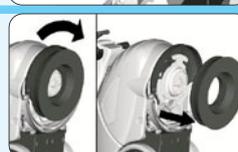


Baby - Baby Plus


WEEKLY

CHECK/REPLACE THE REAR SQUEEGEE RUBBER:

Check the squeegee rubber wear and if it is necessary, turn or replace it.
• Unscrew the wing nuts and take off the squeegee.

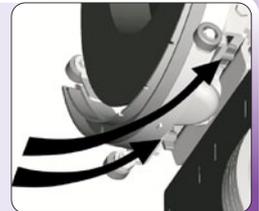

• Release the catch of the rubber holder blade.

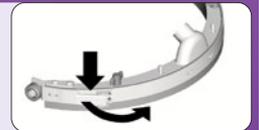

• Take off the rubber.



CHECK/REPLACE THE FRONT SQUEEGEE RUBBER:

Check the wear of the rubber and replace if it is worn out. Unscrew the wing nuts and separate the two metal parts that form the squeegee body. Take off the rubber.



WHEN NECESSARY

ADJUSTING DETERGENT SOLUTION FLOW INTO THE FLOOR:

If necessary, modify the detergent solution quantity on the floor by means of the solution valve lever.



BEFORE USING THE MACHINE, READ CAREFULLY THE USE/MAINTENANCE MANUAL



SAFETY RULES:

- During the operation of the machine, pay attention to other people and especially to the children.
 - Do not squash or bend the main cables.
 - Check the quality of the main cables and in case of damage, stop the machine and replace the cable.
 - Do not use the machine on surfaces covered with flammable liquids or dusts (for example hydrocarbons, ashes or soot).
 - Check that a fire-extinguisher is available on site.
 - In case of fire use a powder based fire-extinguisher.
- BATTERIES:**
- Do not place any metallic tools onto the batteries. Risk of short circuit!

CONTACT ALL BRANCHES

Tel: 1300 347 347

Fax: 1300 348 348

Email: sales@centralcleaning.com.au

**VICTORIA - NEW SOUTH WALES - TASMANIA
SOUTH AUSTRALIA - QUEENSLAND - WESTERN AUSTRALIA**