


QUICK GUIDE FOR THE CORRECT MAINTENANCE OF THE ON_BOARD SCRUBBING MACHINE

DAILY

BEFORE USE


CONNECT THE BATTERIES:

Connect the machines' connector to the batteries' connector.
To start any function of the machine, it is necessary to rotate clockwise the key switch.

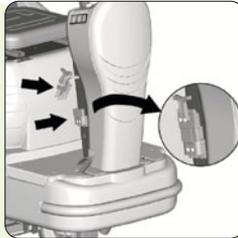

CHECK BATTERY CHARGE LEVEL:

When switching on, the display will show:
• Software version.
• Check card settings (gel or lead/acid) and voltage.
• Indication of the battery charge: 20% = Batteries nearly discharged. 10% = Shutdown.

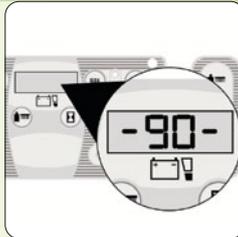


CHARGE THE BATTERIES

(If necessary):
Connect the batteries' connector to the battery charger connector.
USE A SUITABLE BATTERY CHARGER. AVOID THE COMPLETE DISCHARGE OF THE BATTERIES. WHEN THE DISCHARGE SIGNAL APPEARS, PROVIDE IT CHARGE




CHECK THE RECOVERY TANK:

Check the correct closure of the suction filter cap and verify that the squeegee hose is correctly inserted in the tank and in the squeegee.
Check the correct closure of the exhaust plug.

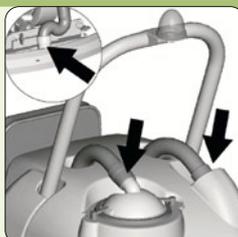

FILL THE DETERGENT SOLUTION TANK:


Open the screw plug and fill it with clean water.
Add the detergent liquid in the recommended percentage.
When the machine is equipped with the 3SD-System, please read the user manual for the functioning.

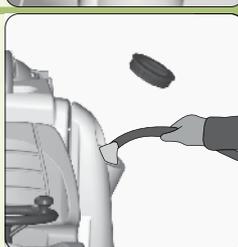

AFTER USE

EMPTYING AND CLEANING THE RECOVERY TANK:

Open the lever plug on the exhaust hose and empty the dirty water into an appropriate containers. Take off the filter, the protection and rinse the tank with a water jet, especially near the inner float and the drainage outlet.

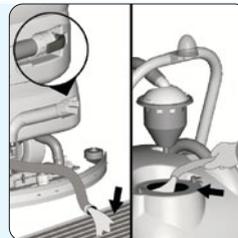


CLEANING SUCTION FILTER:

Take off the filter with the float and its protection. Clean all parts with a water jet and assemble everything. Never use the machine without the filter.




REMOVE AND CLEAN THE BRUSHES:

Rotate the brushes as shown until they are released. Clean them with a water jet and assemble them again. It may be convenient to remove the splash guard rubber in order to facilitate the operation.

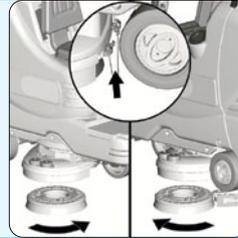


SQUEEGEE CLEANING:

Take off and clean the rubbers and the inner parts of the squeegee being careful to remove the dirt, especially in the inner part of the coupler.

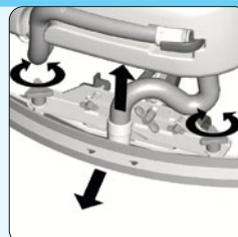

CHARGE THE BATTERIES:

Connect the batteries' connector to the battery charger connector.
USE A SUITABLE BATTERY CHARGER. AVOID THE COMPLETE DISCHARGE OF THE BATTERIES. WHEN THE DISCHARGE SIGNAL APPEARS, PROVIDE IT CHARGE

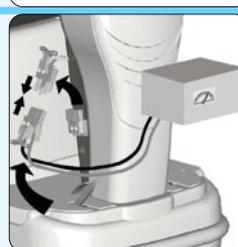

WEEKLY

CHECK THE REAR SQUEEGEE RUBBER:

Check the squeegee rubber wear and if it is necessary, turn or replace it. Uncouple the hook of the rubber holder blade and take off the rubber. When reassembling, insert the rubber into the appropriate guides. The squeegee may be different from the one shown in the picture



CLEAN THE SQUEEGEE HOSE:

Take off the hose from the squeegee coupling and wash the inside of the hose with a water jet.



CLEAN THE SOLUTION TANK AND THE OUTER FILTER:


Bring the machine to an appropriate place for tanks draining.
Open the cap, unscrew the filter cover and then open the solution valve to empty the tank. Rinse with a water jet the solution tank and the filter.



EVERY TWO MONTHS

CHECK THE FRONT SQUEEGEE RUBBER:

Check the wear of the rubber and replace it if it is worn out. For the disassembly, unscrew the wing nuts present in the front part of the squeegee. The squeegee may be different from the one shown in the picture.

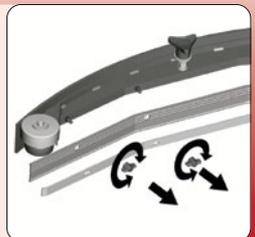

EVERY SIX MONTHS

CHECK THE SPLASH GUARDS:

With the brushes in working position, the splash guard must slightly touch the floor. Check the wear of the splash guards and eventually replace them.




CLEAN THE INNER FILTER OF THE SOLUTION TANK:

Empty the tank and remove the fitting of the water outlet by taking off the two screws that fix it to the tank. Clean the inside filtering part.



CHECK OF THE BRAKES:

Check the braking efficacy of both rear wheels.
Check the braking capacity of the parking and emergency brake.
Not all the machines are equipped with a brake pedal.

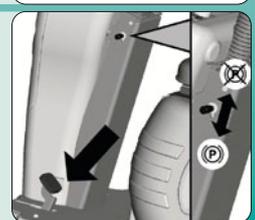

SAFETY RULES:

- The machine must be used exclusively by authorized staff that has been instructed for its use.
- Leaving the machine in parking position, take off the key and put the parking brake.
- During the operation of the machine, pay attention to other people and especially to the children.
- In case of danger immediately press the emergency brake.
- Do not use the machine in explosive atmosphere.
- Do not use the machine on surfaces covered with flammable liquids or dusts (for example hydrocarbons, ashes or soot).
- Check that a fire-extinguisher is available on site.
- In case of fire use a powder based fire-extinguisher.
- Adapt the working speed to the adhesion conditions: in particular, slowdown before facing narrow curves.
- Do not use the machine on areas having a higher inclination than the one stated on the number plate.

BATTERIES:

- At any intervention on the batteries, use suitable acid-proof gloves and glasses.
- Do not smoke near the batteries and do not approach them with free flames.
- Check that a fire-extinguisher is available on site.
- Be very careful in case of leakages or liquid outlets because corrosive.
- Do not place any metallic tools into the batteries. Risk of short circuit!

BEFORE USING THE MACHINE, READ CAREFULLY THE USE/MAINTENANCE MANUAL



CONTACT ALL BRANCHES
Tel: 1300 347 347
Fax: 1300 348 348

Email: sales@centralcleaning.com.au

VICTORIA - NEW SOUTH WALES - TASMANIA
SOUTH AUSTRALIA - QUEENSLAND - WESTERN AUSTRALIA